



THUNDERFORM®

F-150C-09 Installation Guide


Ford 150 Crew Cab 2009 - UP
(Loaded/Amplified)

STEP 1:




Flip up the driver side rear seat and place the enclosure on the floor as shown above. The enclosure should be even with the edge of the seat when the seat is in the lowered position.

STEP 2:

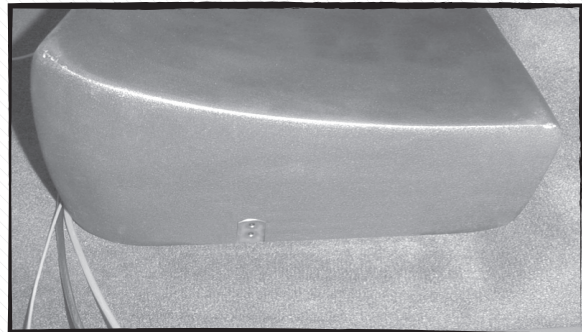

Attach the mounting bracket to the enclosure as shown using (2) 2" screws to attach the bracket to the floor, and (1) M6 bolt to attach the bracket to the enclosure.

STEP 3:

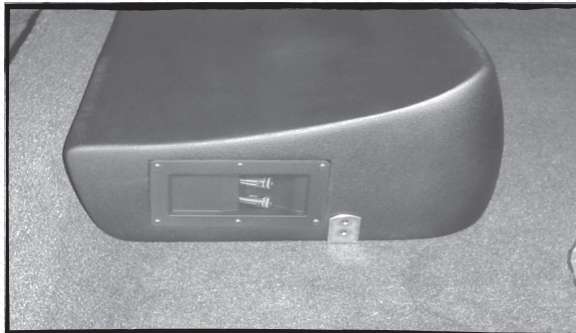

From the passenger side, attach the second bracket to the enclosure as shown. Use the same screws from Step 2.


STEP 4:



Make all final wire connections (See Page 2) and fold the seat down. Your installation is complete. Enjoy your new bass in a small space.

F-150C-09 Installation Guide
Ford 150 Crew Cab 2009 - UP
(Loaded/Amplified)

Speaker Level Wiring

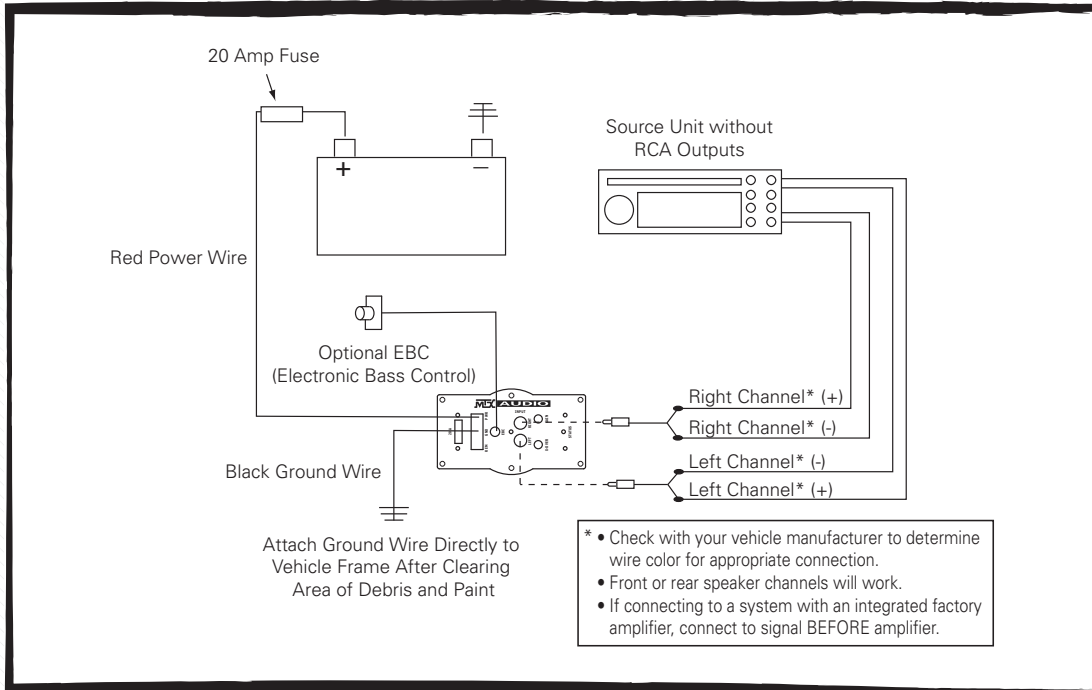

RCA Interconnect Wiring

